



USER INSTRUCTIONS

Ice & Water Dispenser

FDFT10501



SAFETY INSTRUCTIONS-----	2
FEATURES & SPECIFICATIONS-----	4
DISPENSER USE-----	6
DISPENSER CARE-----	10
INSTALLATION INSTRUCTIONS-----	14
TROUBLESHOOTINGS-----	17
SERVICE & IMPORTANT NOTICE-----	20

GENERAL OPERATING INSTRUCTION

**Read these instructions before use and save them for future reference.
Let the unit rest and unplugged for 24 hours before use.**


- Remove all external and internal packaging materials. Be sure that all parts have been included before discarding any packaging materials. You may want to keep the packaging materials for use at a later date.
- Upon receipt and inspection of the unit, the power cord must be replaced if it is damaged.
- Contact customer service at 800-433-9938 or info@fluridaappliances.com.

SAFETY INSTRUCTIONS

Electrical Safety

DANGER	Improper use of the power cord plug can result in the risk of electrical shock, property damage and personal injury or death.
---------------	--

- This appliance is equipped with a 3-prong grounding-type plug, and shall be plugged into a properly connected grounding-type outlet.
- It is required to use a 3-prong grounding-type electrical outlet properly grounded in accordance with the National Electrical Code and local codes and ordinances.
- A separate adequately fused and grounded circuit shall be used for this appliance. The voltage rating must match the rating label on the unit.
- Do not use an adapter or an extension cord.
- Do not under any circumstances cut or remove the third ground prong from the power cord.
- Never unplug the appliance by pulling the power cord. To disconnect the unit, always grip the plug firmly and pull straight out from the wall outlet.
- Do not operate the appliance if the appliance housing is removed or damaged.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing shall be referred to a qualified technician.
- To protect against electric shock, do not immerse appliance, plug or cord into water or other liquids.

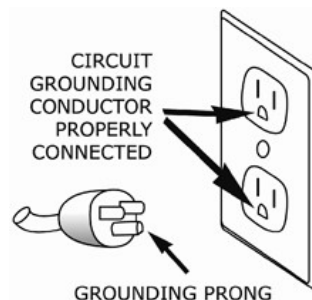

Child Safety

- Exercise caution and use reasonable supervision when appliance is used near children. Never allow children to operate, play with or crawl inside the unit. Keep packing materials away from children.
- Keep fingers out of pinch point areas and be careful when closing doors if children are around.

Hot Water Safety

DANGER	This unit can dispense hot water. Hot water can burn your hands and body and cause serious injury.
---------------	---

- To avoid hot water spilling, always put a cup under the dispenser before you press the button to dispense hot water.

Cleaning

DANGER	To reduce the risk of injury when cleaning your appliance, follow these basic precautions.
---------------	---

- Unplug the appliance or disconnect power before performing any maintenance or cleaning.
- Do not clean appliance with flammable fluids. Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other unit. The fumes can create a fire hazard or explosion.
- Do not use solvent-based cleaning agents or abrasives on the interior or exterior of the appliance. These cleaners may damage or discolor the appliance.
- Do not operate the appliance with wet hands, while standing on a wet surface or while standing in water.

Moving

DANGER	To reduce the risk of injury when moving your appliance, follow these basic precautions.
---------------	---

- Exercise caution when moving and installing the appliance. The unit is heavy, to prevent strain or injury, it may require two or more people to move the unit.
- Remove all ice, empty water and secure all loose shelves before you transport the unit. Use protective materials to prevent the glass shelves from being damaged.

Disposing

DANGER	When disposing of refrigerated appliances, special handling is often required. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
---------------	--


- Keep the carton, plastic bags and any exterior wrapping materials in a safe place where children cannot reach them. If you don't need these materials, destroy or recycle them. These items may cause suffocation to children.
- To avoid entrapment and suffocation, before you discard this appliance, remove the doors and leave the shelves in place, so that children may not climb inside.

FEATURES & SPECIFICATIONS

Overview

This is a great appliance to help you prepare cold or hot beverages and drinks. The ice and water dispenser is an innovative design that combines cubed and crushed ice with hot and cool water in a single compact product. The freezer keeps 9 lbs of crescent ice cold and available anytime. Bottled Purified or POU filtered water system creates the flexibility to place it anywhere in the office, break room, hotel, home, boat or RV. Stainless or black doors with silver accents give a sleek and modern appearance.

Features and Parts

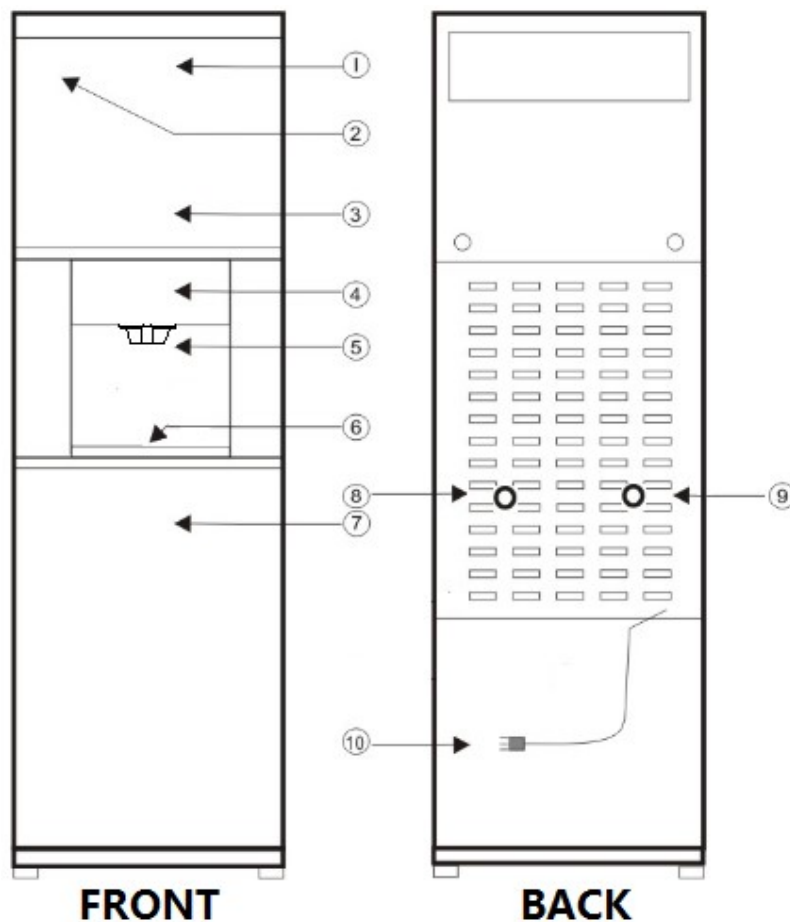

1. Freezer Door
2. Icemaker (located inside)
3. Ice Bin (located inside)
4. Display Panel
5. Ice and Water Dispenser
6. Drip Tray

- 7. Storage**
- 8. Water Inlet Connector**
- 9. RO Drain**
- 10. Power Cord**


- This dispenser allows you to enjoy cubed or crushed ice and hot or iced water with the touch of a button.
- The two-evaporator cooling system and the ice freezer keep ice from melting and produce ice quicker.
- Bottled water, regular or RO water filtration system provides you with clean and great tasting water and makes it perfect for all applications.
- Touch control brings you the simplicity to select and dispense your preferred types of ice or water.
- Blue display and bright LED lights make it easy to use anytime and attractive to display anyplace.
- On/Off switches can save energy and give you the flexibility to use ice and hot water.
- Automatic alerts for water and filter will not allow you to run out of water or leave water contaminated.
- Child safety design protects your children from burning.

Specifications and Dimensions

Model No	FDFT10501
Ice Type	Crescent Cubed and Crushed
Ice Production Capacity (70°F Air/50°F Water)	Crescent Ice 11 lb / 24 h
Ice Bin Capacity	9 lb
Water Type	Hot and Cook
Hot Water Temperature	185~195 °F
Hot Water Capacity	1.8 L
Operating Temperature for Ice	50~100 °F
Water Supply	Bottled Water / POU Filtered Water
Storage Volume	3.5 cu ft
Electrical Rating	115V/60HZ/5.6A
Unit Dimensions	18-1/8"W x 20-1/8"D x 58-5/8"H
Depth w/ Door Open 90 Degree	37"
Net Weight	120 lb

DISPENSER USE

DANGER	Hot water can burn your hands and body and cause serious injury.
CAUTION	Do not store food and drink in the ice freezer.
NOTE	For the first time use, allow 24 hours to produce the first batch of ice. Discard the first three batches of ice produced.
NOTE	For the first time use or after replacing the water filters, flush the water system by dispensing several cups of water, then discarding them. Repeat until water is clear and tasting good.

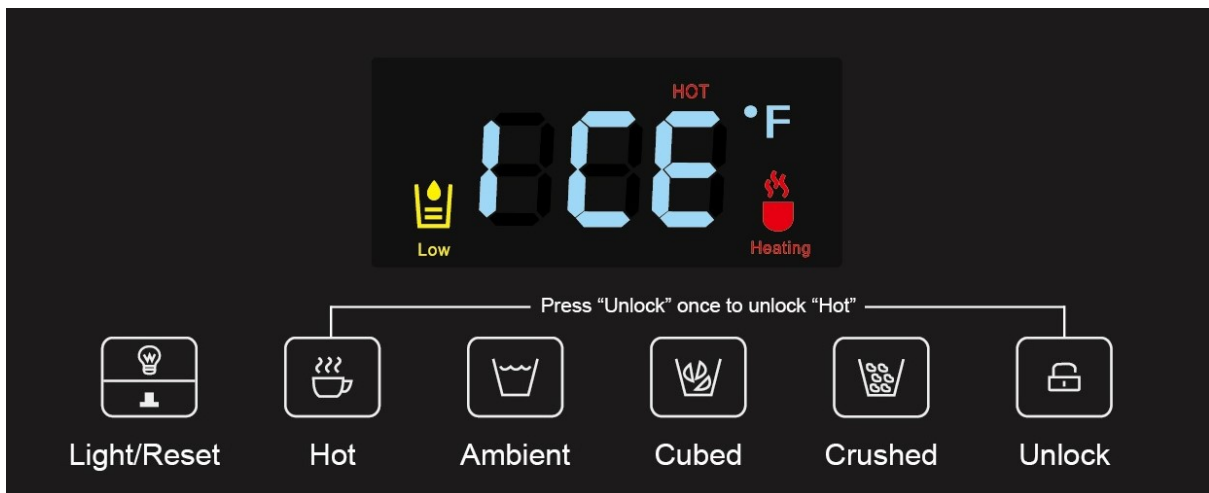

Indicator and Display Functions



Water heater indicator



Low water level indicator



Hot water temperature display

Use of the Dispenser

- Once the unit is powered, the ice and hot water functions will be turned on and "ON" green LEDs will light accordingly.
- If bottled water is selected, the water pump works immediately to pump water from the bottle to the water tank. If filtered water is selected, the water inlet valve opens immediately to let water flow into the water tank.
- Once the water tank is full, the icemaker and water heater will start working immediately. If the water tank is not filled with water within 4 minutes, the "Low" indicator will appear, and then the water pump, water inlet valve, water heater, icemaker and water dispenser will stop working.
- While the water heater is on, the "Heating" indicator will appear and the water temperature will be displayed.
- The cooling system will start working in 5 minutes. The cooling system will stop working automatically when ice is being ejected.

Turning the icemaker function on/off

Icemaker function switch is located on the back.

- Press the "Ice" switch to turn the icemaker off.

Turning the hot water function on/off

Hot water function switch is located on the back

- Press the "Hot" switch to turn the hot water off.

Turning the Light on/off



Light & Reset button

- Press the "Light/Reset" button once to turn the light on. The light will automatically turn off in 5 minutes; press the button again to turn it off.

Dispensing hot water

NOTE	If the "Hot" button is pressed without unlocking, continuous short beeps will be heard. The "Hot" button will be locked automatically once the button is released.
-------------	--



Hot water dispensing button



Hot water unlocking button

- Place a cup under the water dispenser.
- Press the "Hot Water Unlock" button once. You will hear a long beep indicating the "Hot" button is unlocked.
- Then press and hold "Hot" button within 5 seconds to dispense hot water.

Dispensing cook water



Cook water dispensing button

- Place a cup under the water dispenser.
- Press and hold the "Ambient" button to dispense cook water.

Dispensing ice

NOTE

Ice dispenser will stop working while the freezer door is open. If ice cubes haven't been used for days, they may freeze together and unable to dispense. If this happens, pull out the ice bin and shake it, then push it in.

Dispensing cubed ice



Cubed ice dispensing button

- Place a cup under the ice dispenser.
- Press and hold the "Cubed" button to dispense cubed ice.

Dispensing crushed ice



Crushed ice dispensing button

- Place a cup under the ice dispenser.
- Press and hold the "Crushed" button to dispense crushed ice.

Replacing water bottle or checking water supply line



When "Low" indicator appears, water dispensing valves, water pump and water inlet valve will stop working automatically.

- Check if the water bottle is empty and replace it.
- Check if the water supply line is broken and fix it.
- Then press and hold "Light/Reset" button for more than 3 seconds until you "Low" flashes.
- The "Low" indicator will disappear automatically once.

Replacing water filters


CAUTION	All water filters must be replaced at the same time. The filters should be replaced at least once a year.
----------------	--

FLr When "FLr" flashes, replace the water filters immediately.

- Reset the "FLr" status by pressing and holding "Light/Reset" button for 6 seconds until you hear a long beep and the "FLr" disappears.
- Dispense several cups of water to flush the system until water is clear.




DISPENSER CARE

DANGER	Unplug the unit or disconnect power before performing any maintenance.
CAUTION	If ice cubes block the feeler arm, clear the ice cubes before you pull out the ice bin. Move the feeler arm up and keep it above the ice bin while you pull out the ice bin. Otherwise the feeler arm may be damaged if it is obstructed by the ice bin.

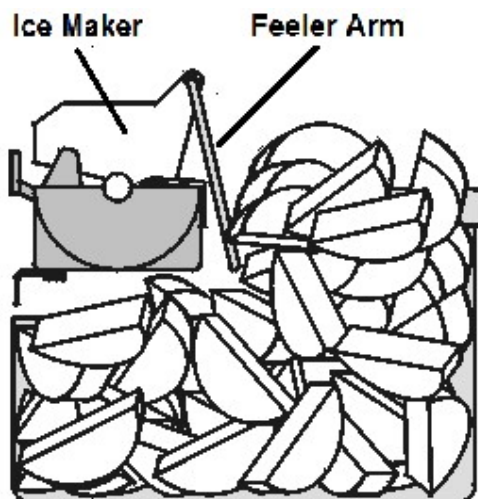


How to empty ice bin

- Use the instructions below to remove the ice bin when emptying ice or cleaning the ice bin.

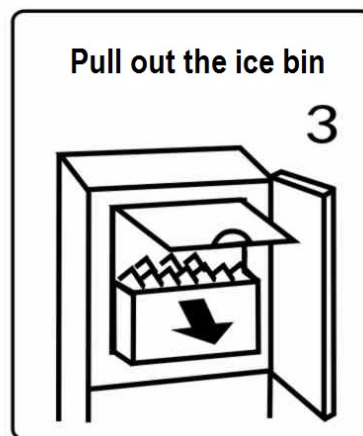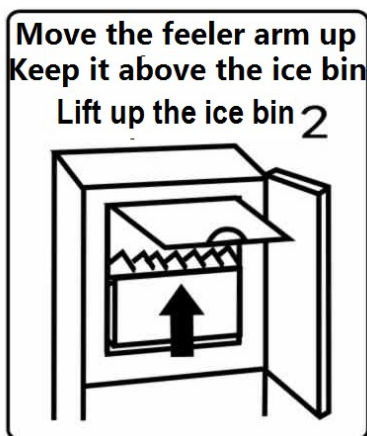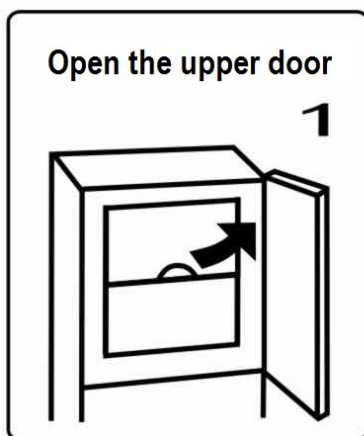

- Push the ice bin back until the auger is engaged in the auger coupler. If it is stuck, rotate the auger 1/8 turn, then push it in again.

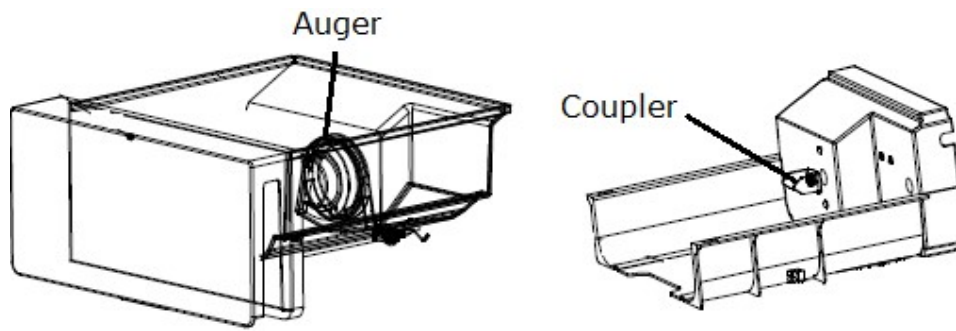

How to release water

- Use the water release drain located in the storage compartment to release the water left in the unit.

How to remove condensate

- The unit is operated with automatic defrost cycle. The water collects in a water tray that is located at the compressor compartment. Normally, the water evaporates through the hot gas tubing.
- In very high humidity conditions, empty water if the tray is full.

How to clean the water system with citric acid if heavy sediment has built

For a bottled unit:

- Fill a 5 gallon bottle with cold water and add 8 oz of citric acid powder.
- Wait for hot water ready. Dispense both hot and cook water to flush the system. Repeat this procedure until the bottle is empty.
- Release the remaining water through the release drain.
- Fill the bottle with clean cold water.
- Dispense both hot and cook water to rinse the system until water is clear.
- Release the remaining water.

For a POU unit:

- Fill a 5 gallon bottle with cold water and add 8 oz of citric acid powder.
- Insert a ¼" OD tube to the line connector located at the back of the unit, and insert another tube end into the bottle near the bottom.
- Place the bottle above the unit so the water in the bottle can flow into the internal water tank by a siphon.
- Wait for hot water ready. Dispense both hot and cook water to flush the system. Repeat this procedure until the bottle is empty.
- Release the remaining water through the release drain.
- Fill the container with clean cold water.
- Dispense both hot and cook water to rinse the system until water is clear

- Release the remaining water.

When the “Low” indicator appears

- Check water selection switch first.
- If bottled water is used, check if the water bottle is empty and replace it,
- If filtered water is used, check if the water supply line is broken and fix it.
- Then press and hold “Light/Reset” button for more than 3 seconds until you hear a long beep to activate the water pump or inlet valve.

If heavy frost builds up in the ice freezer

- Press and hold the “Hot” button for more than 10 seconds until dEF is displayed and flashing. dEF will stop flashing when the defrost cycle starts.
- Once the defrost cycle is complete, the hot water temperature will be displayed.

If ice cubes are frozen together

- Press the “Cubed” or “Crushed” button to dispense ice for a few minutes.
- Open the upper door and pull out the ice bin to shake it for breaking apart cubes or remove the large clumps of ice cubes.

If the ice bin is stuck

- Unplug the unit.
- Use a hair dryer with warm or cold air to melt the ice.
- Pull out the ice bin and empty it.
- Wipe up water and put the ice bin back.
- Plug in the unit.

If ice cubes are jammed in the icemaker

- Unplug the unit.
- Use a hair dryer with warm or cold air to melt the jammed ice cubes.
- Then remove the jammed ice cubes.
- Plug in the unit.

If a power outage happens

- Unplug the unit.
- Pull out the ice bin and empty it.
- Wipe up water and put the ice bin back.

If you are away on holidays or vacations

- Unplug the unit or disconnect the power.
- Open the upper door
- Pull out the ice bin and empty it.
- Let the freezer defrost.
- Wipe up water and dry the freezer.
- Release the remaining water.

What normal operating sounds you may hear

- You may hear a boiling, rattling or gurgling sound produced by flow of refrigerant through the evaporator.
- You may hear air being forced through the unit by the evaporator fan.
- You may hear air being forced through the condenser by the condenser fan.
- You may hear a clicking sound produced by the refrigerant valve or dispensing valve.
- You may hear a water dripping sound during automatic defrost cycle.
- You may hear a high pitched hum or pulsating sound produced by the compressor.
- You may hear the ice cubes being ejected from the icemaker to the ice bin.

INSTALLATION INSTRUCTIONS

Location

CAUTION

**This unit is designed for indoor use only.
Use the rear wheels to move the unit around.**

- Place the unit away from direct sunlight and heat sources.
- Do not install the unit in moist areas.
- Do not install the unit in garage.
- Do not install the unit where the ambient temperature range will be below 50 °F or above 100 °F. Otherwise, the compressor will not be able to maintain proper temperature.
- The unit must be placed in a properly ventilated location to prevent heat build-up generated by the refrigeration system. Failure to do so will prevent the unit from cooling properly, and may result in damage to unit components as well as its contents.
- The unit must be installed on a floor that is level and strong enough to support a fully loaded unit up to 200 lb.

Clearance

CAUTION

This unit is designed for free-standing installation only.

- Allow for minimum 2" on the back, 4" clearance on each side, and 12" at the top for proper air circulation.
- If the unit is installed next to a fixed wall on the right side, leave 6" minimum clearance to allow the door to swing.
- Adjust the leveling legs to level the unit at a height that allows the door to be opened and closed properly.


Electrical Requirements

DANGER

It is required that you connect this unit only to a GFCI protected receptacle. It is strongly recommended that you do not use an adapter or an extension cord to connect this unit because of potential safety hazards.

- A dedicated 120V, 60Hz, 15A fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your appliance be provided.
- Connect to properly polarized outlets only.
- Use outlets that cannot be turned off by a switch.
- Plug the unit into a grounded 3 prong outlet only.

How to insert or disconnect a tube or plug

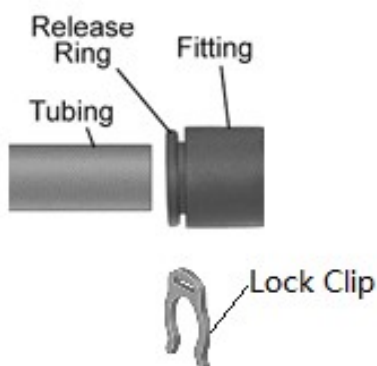


1. Remove the lock clip first.
2. To install, insert a tube or plug until it is engaged;
To disconnect, press the release ring down and pull out a tube or plug.
3. Install the lock clip.

If You Use Bottled Water

NOTE	Use 3, 4 or 5 gallon bottled water only. Drain is not required.
-------------	---

- Place the bottle onto the loading area.
- Remove the plug from the pump connector and insert the dip tube into it.

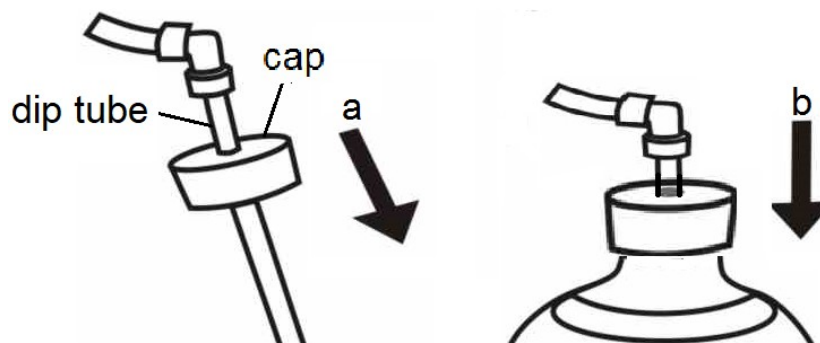


- Hold the pump connector to insert the dip tube into the bottle until it stops. Place the cap onto the bottle neck tightly.
- Turn the water selection switch as indicated to use **Bottled Water**.
- Then plug in the unit to restart.

If You Use Filtered Water

NOTE	A municipal water supply or other potable water with water pressure between 20 and 120 psig is required to operate this unit. Drain is not required.
-------------	--

- Check if the pump connector is closed with a plug.
- Remove the plug from the water inlet connector (8), which is located at the back of the unit. Insert the filtered water line into the water inlet connector (8) until it is engaged. For an internal installation, cut tubes as shown.
- Turn the shutoff valve on and make sure there are no water leaks.
- Turn the water selection switch as indicated to use **Regular Filter** or **RO Filter**.
- Then plug in the unit to restart.

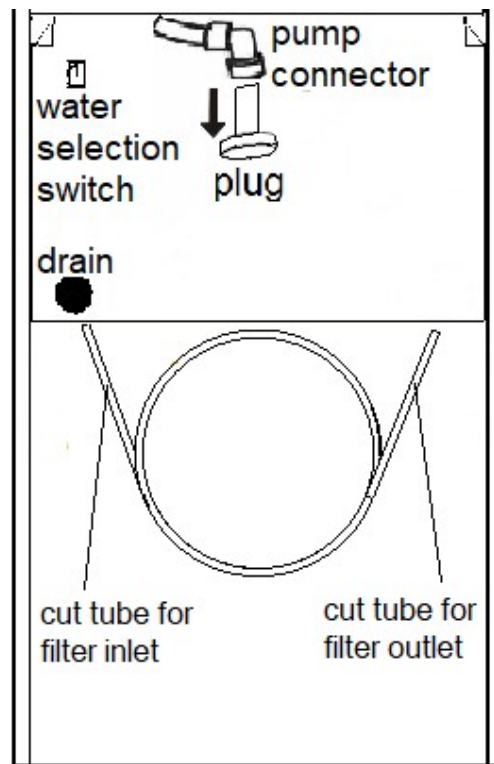

TROUBLESHOOTINGS

Chart

Complaint	Possible Causes	Response
Unit is not working and display is not lit	<ul style="list-style-type: none"> a. Power cord is unplugged. b. No power at outlet. c. Power cord is broken. d. Control PCB is defective or with wiring problems. e. Display PCB is defective or with wiring problems. 	<ul style="list-style-type: none"> a. Plug in the power cord. b. Check for outlet and breaker or fuse. c. Call for service. d. Call for service. e. Call for service.
“Low” indicator appears (internal water reservoir is at low water level, to reactivate the water pump or inlet valve, press and hold “Light/Reset” button for more than 3 seconds)	<ul style="list-style-type: none"> a. The water selection switch is not set correctly. b. Water bottle is empty. c. Filtered water supply is turned off or line is broken. d. Air is trapped. e. Internal water tubes are loose, kinked or broken. f. The water pump is defective or with wiring problems g. The water inlet valve is defective or with wiring problems. 	<ul style="list-style-type: none"> a. Select bottled or filtered water source, then unplug and plug the unit. b. Replace it. c. Fix it. d. Release cups of water from the water release drain. e. Call for service. f. Call for service. g. Call for service.
Icemaker is not producing ice	<ul style="list-style-type: none"> a. Water level is low and “Low” indicator appears. b. The icemaker is turned off. c. There is ice in the ice mold, but ice cubes are jammed. d. There is ice in the ice mold, but the icemaker is not working. e. There is water in the ice mold but the freezer is not cold. f. There is no water in the ice mold and the water fill tube freezes. g. There is no water in the ice mold and the water filters are clogged. h. There is no water in the ice mold and the icemaker water pump is defective or with wiring problems. i. There is no water in the ice mold and the icemaker is defective or with wiring problems.. 	<ul style="list-style-type: none"> a. See “Low” indicator appears. b. Turn the icemaker on. c. Clear the ice cubes. d. Call for services. e. Call for services. f. Unplug the unit and remove the ice bin then wait until fill tube is clear. g. Bypass the water filters and check if ice quality improves. h. Start to push the icemaker ejector and it can rotate to its starting position. Call for service. i. Start to push the icemaker ejector but it can't rotate to its starting position. Call for service.
Icemaker is not producing enough ice or ice cubes are small	<ul style="list-style-type: none"> a. The freezer door is not closed properly. b. The ice chute flap is not closed properly c. Air is trapped in the icemaker 	<ul style="list-style-type: none"> a. Check for the door seal and door opening. b. Check for the flap. c. Release cups of water from the water

	<p>water line and the ice mould is not filled with sufficient water.</p> <p>d. The icemaker water pump is not working properly.</p> <p>e. The icemaker is not working properly.</p> <p>f. The cooling system is not working properly.</p>	<p>release drain.</p> <p>d. Call for services.</p> <p>e. Call for service.</p> <p>f. Call for service.</p>
Ice cubes are hollow	<p>a. The icemaker thermostat is defective.</p> <p>b. The icemaker water pump is defective.</p> <p>c. The cooling system is not working properly.</p>	<p>a. Call for service.</p> <p>b. Call for service.</p> <p>c. Call for service</p>
Ice cubes are frozen together in the ice bin	<p>a. If ice cubes haven't been used for a long period of time, they may freeze together.</p> <p>b. Ice cubes are produced continuously because the feeler arm is blocked up.</p> <p>c. The freezer door is not closed properly.</p> <p>d. The icemaker is not working properly.</p> <p>e. The cooling system is not working properly.</p>	<p>a. Pull out the ice bin and shake it or remove the large clumps of ice cubes.</p> <p>b. Clear ice cubes around the feeler arm.</p> <p>c. Check for the door seal or door opening.</p> <p>d. Call for service.</p> <p>e. Call for service.</p>
Crushed ice is not dispensed	<p>a. There are not enough ice cubes in the ice bin.</p> <p>b. Ice cubes are frozen together in the ice bin.</p> <p>c. The freezer door is open.</p> <p>d. The freezer door magnetic switch is defective.</p> <p>e. The auger motor is broken.</p> <p>f. The flap motor is broken or with wiring problems.</p> <p>g. Control PCB is defective or with wiring problems.</p> <p>h. Display PCB is defective or with wiring problems.</p>	<p>a. See Icemaker is not producing ice or Icemaker is not producing enough ice or ice cubes are small.</p> <p>b. Pull out the ice bin and shake it or remove the large clumps of ice cubes.</p> <p>c. Close it.</p> <p>d. Replace it.</p> <p>e. Call for service.</p> <p>f. Call for service.</p> <p>g. Call for service.</p> <p>h. Call for service.</p>
Cubed ice is not dispensed	<p>a. There are same problems as crushed ice.</p> <p>b. The solenoid is defective.</p>	<p>a. See Crushed ice is not dispensed.</p> <p>b. Call for service.</p>
Hot water is not hot	<p>a. The water heater stops working automatically when "Low" indicator appears.</p> <p>b. The hot water function is turned off.</p> <p>c. The water heater is broken.</p> <p>d. The thermostat is defective.</p>	<p>a. See "Low" indicator appears.</p> <p>b. Turn the hot water function on.</p> <p>c. Call for service.</p> <p>d. Call for service.</p>
Hot water is not hot enough	<p>a. The thermostat is defective.</p>	<p>a. Call for service.</p>
Hot water heater smells burning	<p>a. The hot water tank is dry burning.</p>	<p>a. Call for service.</p>
Water dispensing is not working	<p>a. The water dispensing valve stops working automatically when "Low" indicator appears.</p> <p>b. Air is trapped.</p>	<p>a. See "Low" indicator appears.</p> <p>b. Release cups of water from the water</p>

	c. The dispensing valve water tubes are broken. d. The water dispensing valve is defective. e. Control PCB is defective or with wiring problems. f. Display PCB is defective or with wiring problems.	release drain. c. Call service. d. Call service. e. Call service. f. Call service.
Water dispenser is slow	a. The water dispensing tubes are kinked. b. The water dispensing valve is defective.	a. Straighten them. b. Call service.
Water is leaking	a. The dispenser drip tray is full. b. The condensate drip tray is full. c. The internal water reservoir or tubes is leaking. d. The water level sensor of the internal water reservoir is defective. e. The water dispensing valve is defective. f. Ice is being melted because of high freezer temperature.	a. Empty it. b. Empty it. c. .Call for service. d. Call for service. e. Call for service. f. Check for power or call for service.
Icemaker evaporator is iced	a. The freezer door is not closed properly. b. The ice chute flap is not closed properly. c. Water fill tube is leaking water.	a. Close it. b. Close it. c. Align the fill tube in the fill cup.
Both freezer and icemaker evaporators are iced	a. The defrost solenoid valve is defective or with wiring problems. b. The defrost drip tray heater is broken or with wiring problems. c. The evaporator fan is broken. d. The defrost sensor is defective. e. The freezer sensor is defective.	a. Call for service. b. Call for service. c. Call for service. d. Call for service. e. Call for service.

Codes

Codes	Faults	Response
E01	Defrost temperature probe	Call service
E02	Freezer temperature probe	Call service
E03	Hot water temperature probe	Turn off heater & Call service
E04	Hot water temperature extremely high	Turn off heater & Call service
E05	Water level float switch	Turn off heater & Call service
E06	Freezer door is open	Close door
E07	Icemaker	Call service
E08	Display board or control board	Call service
E09	Freezer temperature extremely high	Disconnect power & Call service
E10	Freezer temperature high	Disconnect power & Call service

SERVICE & IMPORTANT NOTICE

The manufacturer has a policy of continuous improvement on its products and reserves the right to change materials and specifications without notice.

Contact us with any questions at 800-433-9938 or info@floridaappliances.com

Or visit 24412 Main St. Suite 105, Carson, CA 90745 and
www.floridaappliances.com

LIMITED WARRANTY: Seller warrants that the goods will be free of defects in materials and workmanship for a period of 12 (twelve) months from date of sale, removal and re-installation of unit is not included in warranted labour. For a scratch and dent or refurbished unit, warranty is 3 months from your dated invoice (parts for function only, not cosmetic). There is no warranty on parts purchased separately. Purchaser's exclusive remedy is limited, at Seller's option; to repair or replace defective part[s] with either new or factory reconditioned part[s]. Purchaser is responsible for shipping the unit pre-paid to designated facility and Seller will pay return shipping charges in the continental United States for items repaired under warranty within 12 (twelve) months from date of sale. Improper placement of the unit will void the warranty. This limited warranty does not cover damage due to such things as accident, misuse, abuse, mishandling, neglect, acts of God, fires, earthquakes, floods, high winds, government, war, riot or labor trouble, strikes, lockouts, delay of carrier, unauthorized repair, or any other cause beyond the control of the Seller, whether similar or dissimilar to the foregoing. Seller is not responsible for any damages caused to Seller's property resulting from the good. This limited warranty applies only inside the Continental US. (Alaska, Puerto Rico and Hawaii are not warranted.)

Seller is not responsible for incidental or consequential damages, and there are no warranties, expressed or implied, which extend beyond the Limited Warranty described above. The implied warranties of merchantability and of fitness for a particular purpose are hereby expressly disclaimed. Some states do not allow the exclusion of incidental or consequential damages, or a waiver of the implied warranties of fitness and/or merchantability, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. In the event of any dispute between Seller and Purchaser arising out of or relating to these terms and conditions or to the goods sold generally, Purchaser must first file a written claim with Seller within ten days of the occurrence giving rise to the claim and wait an additional thirty days for a response before initiating any legal action. In no event may Purchaser initiate any legal proceeding more than six months after the occurrence of the event giving rise to the dispute.

The above terms and conditions are the only ones governing this transaction and Seller makes no oral representations of any kind. These Terms and Conditions can only be modified in writing, signed by both Purchaser and Seller.

FD is a registered trademark of Florida Appliances Inc. All products, features, and services are subject to change without notice. We cannot guarantee the accuracy of the contents of this document. We disclaim liability for errors, omissions, or future changes.
Copyright©2018 Florida Appliances Inc. All rights reserved.